

Scandinavian Heatpumps by Panasonic

Air-air heatpumps 2007

How we do business, we:

- Only sell to tradesmen and registered companies
- Refer consumer enquires to a local installer if we have one in the area
- Encourage consumers to ask their plumber/electrician/carpenter to start up as a local installer / sales agent.
- Advertise and promote “Scandinavian Heat pumps by Panasonic” in magazines and on the internet.
- Help local installers / retailers to get up and running.
- Stock tools and spare-parts and handle guarantees according to contract.




Any tradesman can do the installation:

1. Figure out where to position the inside and outside units
2. Mount bracket on external wall
3. Mount the internal unit on internal wall
4. Pull the supplied copper pipes, drainpipe and electric cables through the wall (electric cables are not included, use standard cable)
5. Connect the two copper pipes and vacuum pump the pipes and internal unit
6. Start the heat-pump with the remote control and check everything
7. Put the covers over the pipes and cables and leave a tidy installation

It is easy to get started as an installer / sales agent;
This is all you need:

Visit us in Galway to see a presentation and a unit running. We will give you printed step-by-step instructions with pictures.

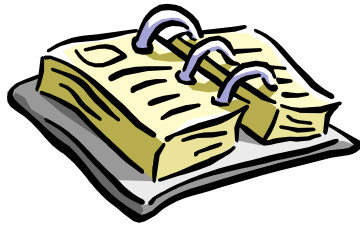

You can buy our **tool starter package** containing all special tools you need: Vacuum pump, manometers, hose-kit, flexible adaptor, leak-detector, flange tools and pipe cutter.



You also need your own toolbox with ordinary tools such as: hole saw for 70mm holes through external wall, pliers, screwdrivers, spanners 17mm and 22mm, some screws and plugs.



Heatpump with accessories package; included with every heat-pump:

Internal unit



External unit



Remote control



Wall bracket with vibration dampers



Pipe kit 3m or 5m



Defrost heater with thermostat



Cover kit for pipes and cables

